 
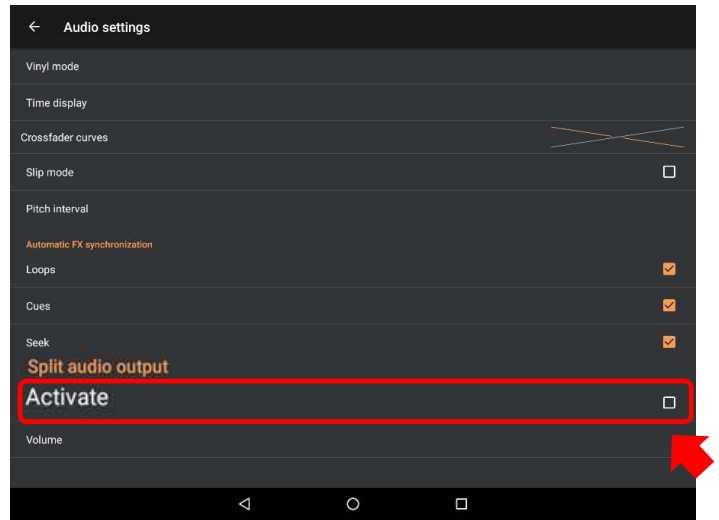 


Sound comes out of my PC/Mac or the built-in speaker of my smartphone incorrectly.

Please check in the following order:

1. Confirm Split Output

Tap Gear icon > [Audio settings] on the top of the screen and turn on [Activate] in [Split audio output].

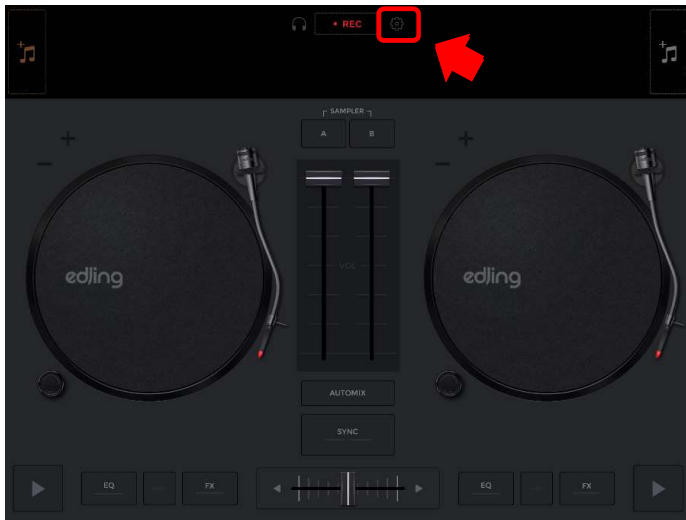

2. Adjust the speaker volume

1. Minimize the volume level of the PC/Mac or smartphone.
2. Play a track.
3. Move the DDJ-200 channel fader to the top.
4. Move the crossfader of the DDJ-200 to the center.
5. Increase the volume level of the PC/Mac or smartphone little by little.
6. Adjust the volume for the power speakers until you have a volume level you're happy with.

3. Adjust headphone volume

Tap Gear icon > [Audio settings] > [Volume] on the top of the screen, and move the slider in [Volume] to adjust the volume.

