

 
 
Sound comes out of my PC/Mac or the built-in speaker of my smartphone incorrectly.

Please check in the following order:

1. Confirm Split Output

Click the [MONO SPLIT ON/OFF] button (*) on the top of the screen.

*The split-cable mark displayed when the DDJ-200 is connected.

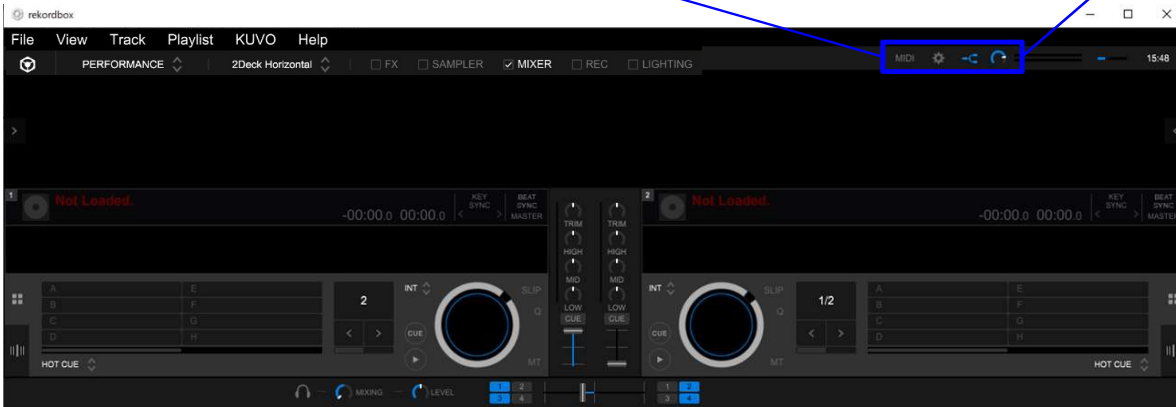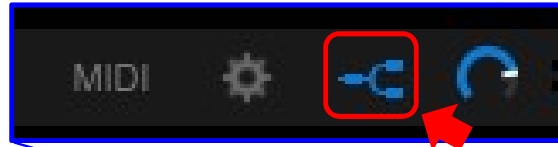

2. Adjust the speaker volume

1. Minimize the volume level of the PC/Mac or smartphone.
2. Play a track.
3. Move the DDJ-200 channel fader to the top.
4. Move the crossfader of the DDJ-200 to the center.
5. Increase the volume level of the PC/Mac or smartphone little by little.
6. Adjust the volume for the power speakers until you have a volume level you're happy with.

3. Adjust headphone volume

Click [MIXER] on the upper left of the rekordbox screen to display the mixer panel in the middle of the screen.

Adjust the volume level using the [LEVEL] knob in the mixer panel.

