

If the volume level is too high, the sound may be affected by distortion or clipping.  
Adjust the volume level as follows:

1. Check the channel level indicator on the screen.

Adjust the level with the trim knob on the screen so the orange color lights up in the louder parts of the track.

2. Adjust the volume level of the master output on the screen.

Adjust the master volume on the screen with the channel fader at the top.

3. Turn off MASTER TEMPO.

If sound skipping, sound cutting, or noise occurs, see [FAQ >\[Troubleshooting \] >\[Sound skips, cuts, or is affected by noise when I'm using rekordbox.\]](#)