


# DDJ-ERGO

## Hardware Diagram djay2 for iPad

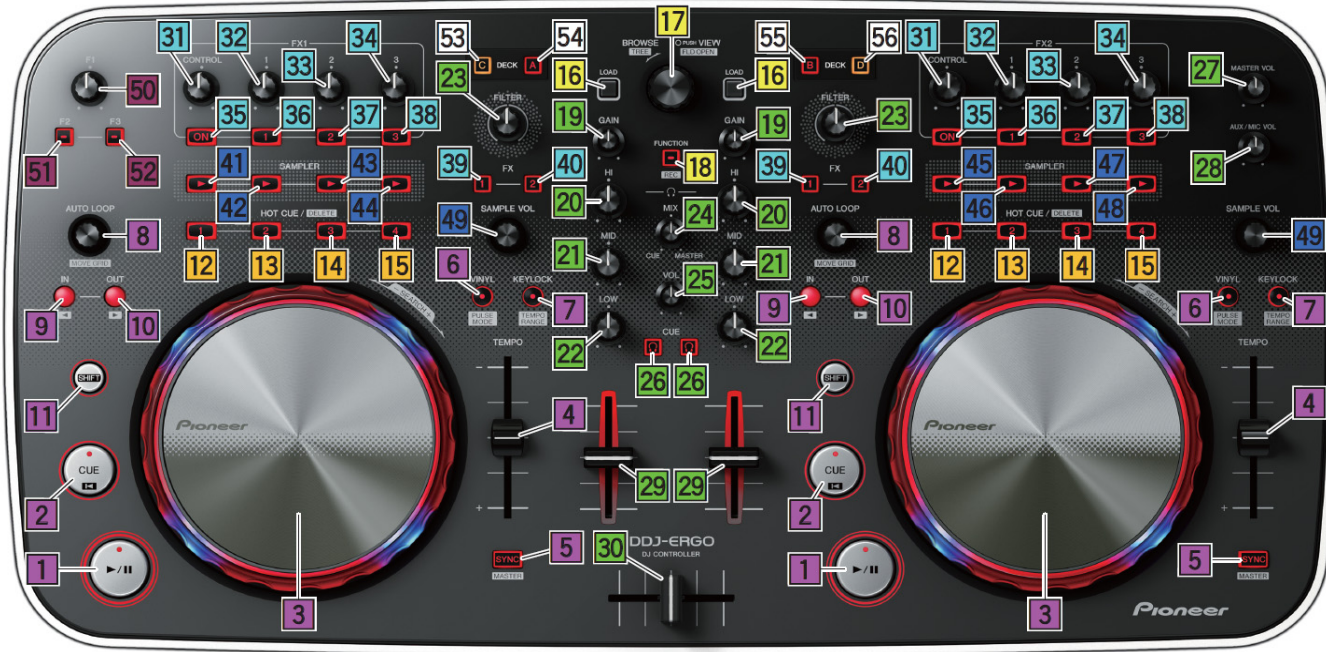

GROUP	NAME	FUNCTION	(+SHIFT)
<b>TRANSPORT</b>			
1	▶/	Play / Pause	Echo Brake
2	CUE	Set/call a CUE	Jump to the beginning
3	JOG	top plate	Scratch (when Vinyl is on) Search (when Vinyl is off)
		outer wheel	Pitch Bend
4	TEMPO	Tempo *1	Tempo (Tweak) *1
5	SYNC	Sync	-
6	VINYL	Toggle Scratch Mode / Jog Seek Mode	Switch Pulse mode
7	KEY LOCK	Key Lock	-
8	AUTO LOOP	turn	Loop length (half / double)
		press	Loop On/Off
9	IN	Loop In	Skip backward
		Half (during loop)	Skip backward
10	OUT	Loop out	Skip forward
		Unloop (during loop)	Skip forward
11	SHIFT	-	-
<b>HOT CUE</b>			
12	1	Set Cue 1	Jump to Cue 1
13	2	Set Cue 2	Jump to Cue 2
14	3	Set Cue 3	Jump to Cue 3
15	4	Set Cue 4	Jump to Cue 4
<b>BROWSE</b>			
16	LOAD	While Library is displayed: When a track is selected, load the track (close library) When a track is not selected, display the next layer. When Library is not shown, display the Library.	
		(Long press) Close library if open	
17	BROWSE (turn)	Browse	Browse
	VIEW (press)	Display the previous layer (If a track is selected)	-
18	FUNCTION	Automix On/Off	Recording On/Off
<b>MIXER</b>			
19	GAIN	Gain	-
20	HI	EQ (HI)	-
21	MID	EQ (MID)	-
22	LOW	EQ (LOW)	-
23	FILTER	High pass/Low pass filter	-
24	MIX	Headphone Cue Mix	-
25	VOL *2	Headphone Cue Volume	-
26	CUE	Headphone Cue monitor on/off	-
27	MASTER VOL *2	Master Volume	-
28	AUX / MIC VOL	-	-
29	Channel fader	Channel fader	-
30	Crossfader	Crossfader	-

GROUP	NAME	FUNCTION	(+SHIFT)
<b>EFFECT</b>			
31	CONTROL	Wet / Dry	-
32	1	FX 1 Parameter	-
33	2	FX 2 Parameter	-
34	3	FX 3 Parameter	-
35	FX ON	FX 1 On / All FX Off	Instant FX: Punch (hold)
36	1	FX 1 On/Off (default : Echo)	Instant FX: Flanger (hold)
37	2	FX 2 On/Off (Flanger)	Instant FX: Crush (hold)
38	3	FX 3 On/Off (Gate)	Instant FX: Twist (hold)
39	FX1	Absorb FX (hold)	Instant FX: Absorb (hold)
40	FX2	Drift FX (hold)	Instant FX: Drift (hold)
<b>SAMPLER</b>			
41	▶	Sampler Play 1	Bounce Loop 1/16 (1) (hold)
42	▶	Sampler Play 2	Bounce Loop 1/8 (1) (hold)
43	▶	Sampler Play 3	Bounce Loop 1/4 (1) (hold)
44	▶	Sampler Play 4	Bounce Loop 1/2 (1) (hold)
45	▶	Sampler Play 7	Bounce Loop 1/16 (2) (hold)
46	▶	Sampler Play 8	Bounce Loop 1/8 (2) (hold)
47	▶	Sampler Play 9	Bounce Loop 1/4 (2) (hold)
48	▶	Sampler Play 10	Bounce Loop 1/2 (2) (hold)
49	SAMPLE VOL	turn	Sampler Volume
		press	Display/Hide Sampler Pad
<b>OTHER</b>			
50	F1	Turntable Brake Duration	Turntable Brake Duration
51	F2	Auto-Transition Left	-
52	F3	Auto-Transition Right	-
<b>DECK CHANGE</b>			
53	DECK C	N/A	-
54	DECK A	Deck A Select	-
55	DECK B	Deck B Select	-
56	DECK D	N/A	-

\*1 The direction (+/-) of the Slider is changeable. To change it, open Preferences, select the General tab, and check or uncheck the slider setting at the Turntable section.

\*2 The GUI counterpart on vjay for iPad is not synced.

[Note] Please use your iPad to control any features other than listed in the above hardware diagram.

