


DDJ-ERGO

Hardware Diagram for djay

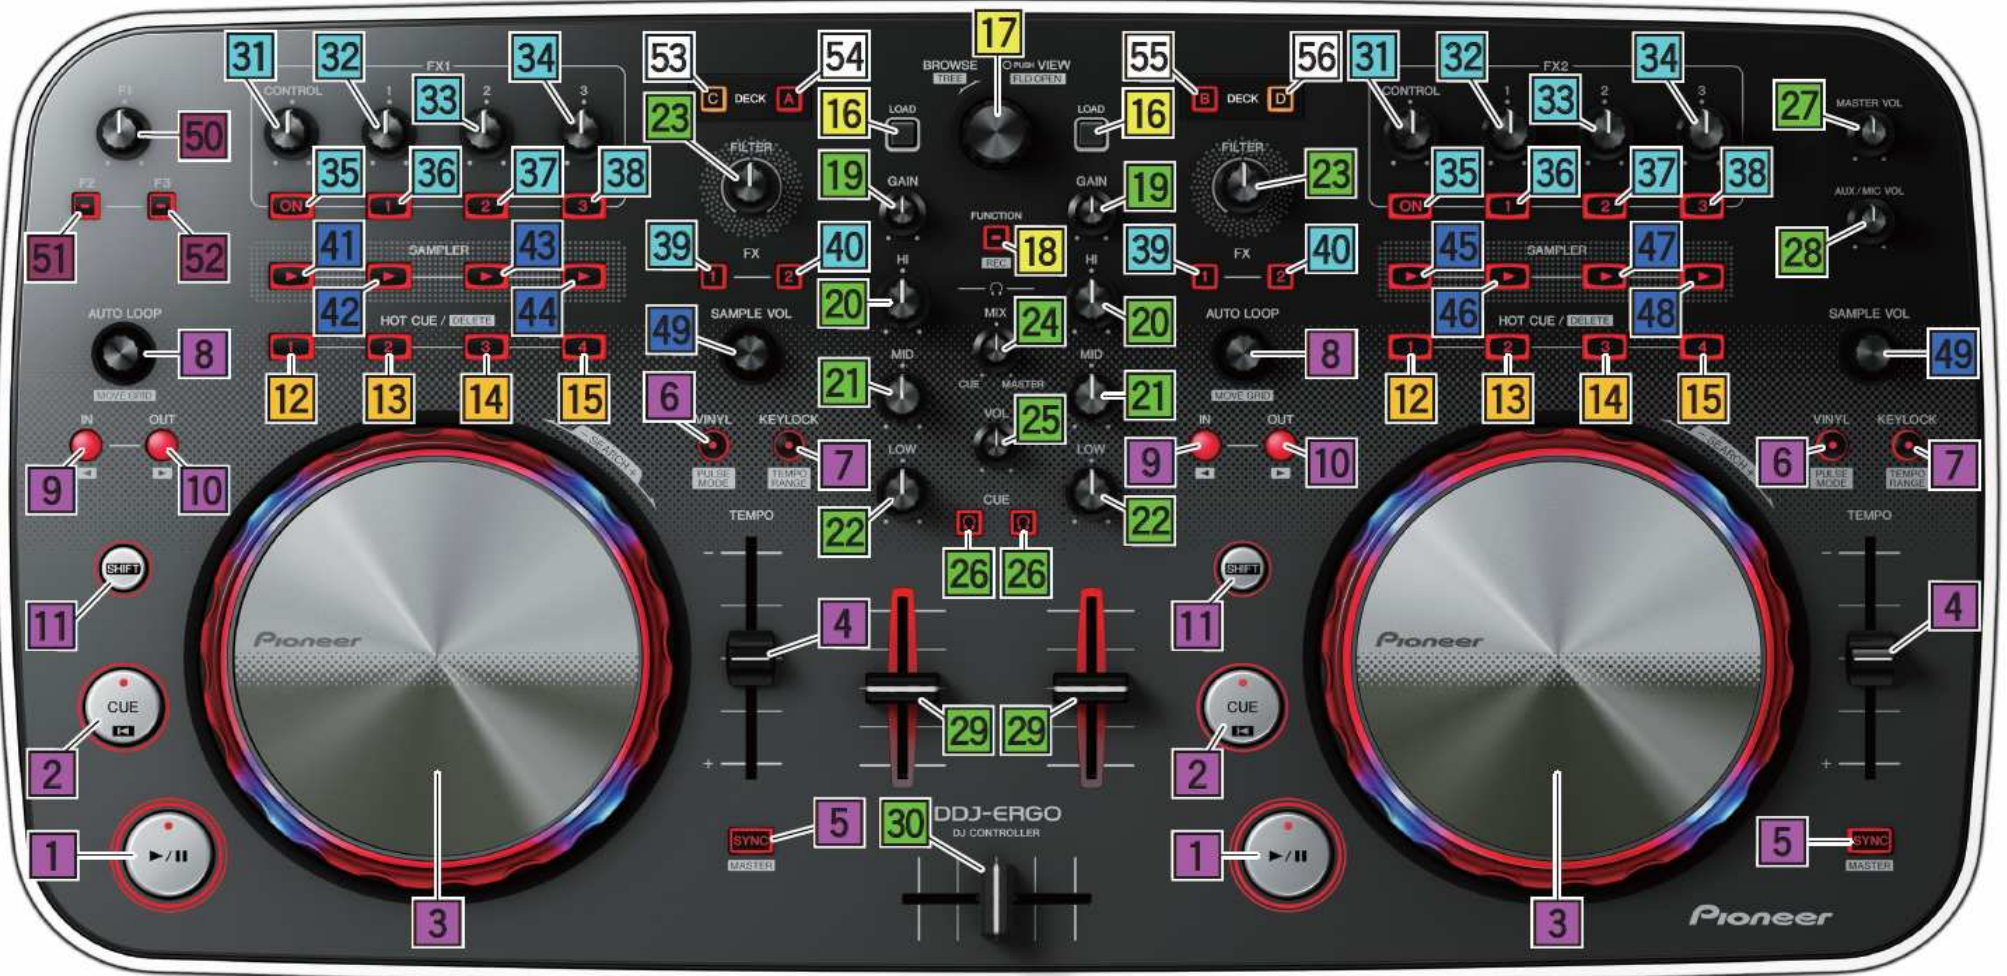

GROUP	No.	NAME	FUNCTION	(+SHIFT)
TRANSPORT				
	1	▶/	Play / Pause	Echo Brake
	2	CUE	Cue	Jump to beginning
	3	JOG	top plate: Scratch(Vinyl On) , Search(Vinyl Off)	Scroll Library
		outer wheel	Pitch Bend	-
	4	TEMPO	Speed Slider *1	Speed Slider (Fine tuning) *1
	5	SYNC	Sync	Match Key
	6	VINYL	Scratch Mode	Pulse Mode Change
	7	KEY LOCK	Key Lock	-
	8	AUTO LOOP	turn: Loop length (half / double)	-
		press	Loop On/Off	-
	9	IN	Loop In	Skip backward
			Half (during playing a loop)	-
	10	OUT	Loop out	Skip forward
			Unloop (during playing a loop)	-
	11	SHIFT	-	-
HOT CUE				
	12	1	Set Cue 1	Jump to Cue 1
	13	2	Set Cue 2	Jump to Cue 2
	14	3	Set Cue 3	Jump to Cue 3
	15	4	Set Cue 4	Jump to Cue 4
BROWSE				
	16	LOAD	L: Load	Select Playlists
			R: Load	Select Tracks Table
	17	BROWSE	(turn): Browse	-
			(press): Switch library table (playlists/tracks/Automix queue)	Add to Automix queue / remove from Automix queue
	18	FUNCTION	Automix On/Off	Recording On/Off
MIXER				
	19	GAIN	Gain	-
	20	HI	Hi	-
	21	MID	Mid	-
	22	LOW	Low	-
	23	FILTER	Filter	-
	24	MIX	Cue Mix	-
	25	VOL	Cue Volume *2	-
	26	CUE	Cue on/off	-
	27	MASTER VOL	Master Volume *2	-
	28	AUX / MIC VOL	Mic Volume	-
	29	Channel fader	Channel fader	-
	30	Crossfader	Crossfader	-

GROUP	No.	NAME	FUNCTION	(+SHIFT)
EFFECT				
	31	CONTROL	Wet / Dry	-
	32	1	FX 1 Parameter	-
	33	2	FX 2 Parameter	-
	34	3	Gate Parameter	-
	35	FX ON	FX 1 On / All FX Off	Instant FX: Punch (hold)
	36	1	FX 1 On/Off	Instant FX: Flanger (hold)
	37	2	FX 2 On/Off	Instant FX: Crush (hold)
	38	3	Gate On/Off	Instant FX: Twist (hold)
	39	FX1	Instant FX: Absorb (hold)	-
	40	FX2	Instant FX: Drift (hold)	-
SAMPLER				
	41	▶	Sampler Play 1	Bounce Loop 1/16 (hold)
	42	▶	Sampler Play 2	Bounce Loop 1/8 (hold)
	43	▶	Sampler Play 3	Bounce Loop 1/4 (hold)
	44	▶	Sampler Play 4	Bounce Loop 1/2 (hold)
	45	▶	Sampler Play 3	Bounce Loop 1/16 (hold)
	46	▶	Sampler Play 4	Bounce Loop 1/8 (hold)
	47	▶	Sampler Play 5	Bounce Loop 1/4 (hold)
	48	▶	Sampler Play 6	Bounce Loop 1/2 (hold)
	49	SAMPLE VOL	turn: Sampler Volume	-
			press: Toggle Sampler Visibility	-
OTHER				
	50	F1	Turntable Brake Duration	-
	51	F2	Auto-Transition Left	-
	52	F3	Auto-Transition Right	-
DECK CHANGE				
	53	DECK C	N/A	-
	54	DECK A	Deck A Select	-
	55	DECK B	Deck B Select	-
	56	DECK D	N/A	-

*1 The direction(+/-) of Speed Slider is changeable. To change it, open Preferences, select the General tab, and check or uncheck the slider setting at the Turntable section.

*2 Right after launching djay, the knob value of djay is set to 9 o'clock by default regardless of the physical position of the knob on this unit. When turning the knob on the unit, the value will be synced with it.

[Note] Please use your computer to control any features other than listed in the above hardware diagram.