



## Workaround when macOS or OS X does not recognize your DJ equipment

1. Connect your computer with your DJ equipment using a USB cable. Turn on the power of the DJ equipment.
2. Open [Finder] and select [Applications] from [Go] on the menu bar.
3. Run [Audio MIDI Setup] in the [Utilities] folder.
4. Ensure that [Audio MIDI Setup] is shown on the menu bar. Then, select [Show MIDI Studio] or [Show MIDI Studio] from [Window] drop-down menu.

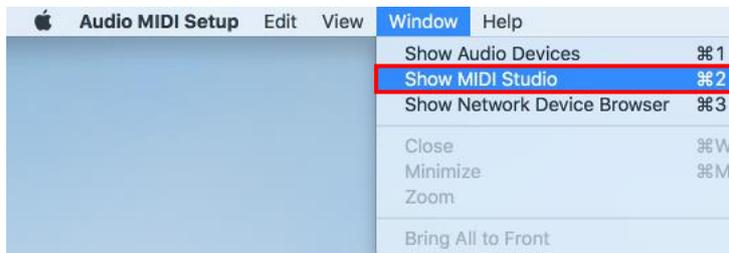

An example of macOS High Sierra

5. [MIDI Studio] window opens up.
  - [USB MIDI Device] may appear, instead of the connected DJ equipment.
6. Switch [Default] to [New Configuration] from [Configuration] drop-down menu.

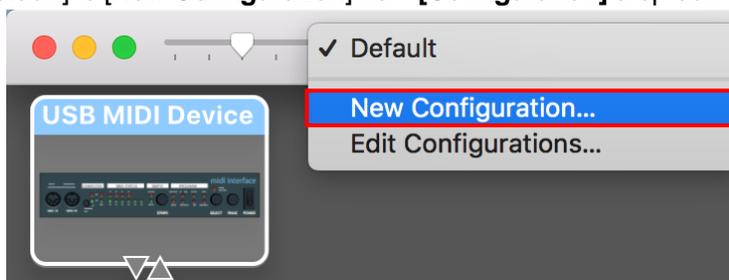

An example of macOS High Sierra

7. Make sure that [USB MIDI Device] is changed to the connected DJ equipment.
  - An example when DDJ-RB is connected to macOS High Sierra.



### About Trademarks and Registered Trademarks

- Pioneer DJ is a trademark of PIONEER CORPORATION and is used under license.
- Mac, OS X and macOS are registered trademarks of Apple Inc. in the U.S. and other countries.